



Tips and Tricks

GSP/TCT, GSP/TDE, GSP/TDS

Key Command Functions

Icon	Availability	Description
ESC	Always	Escape (Exit function and go back up one level/exit DAS)
↑ F1	Always	Back
₽ F2	When an immediately following screen is available	Forward
€ F2	At the end of a test step	Forward (Back to test step selection)
F 3	In menus	Selection
START F3	Actuations	Start actuation (for passenger vehicles)
F3	Start screen	System units Select measurement system (Values are shown in the unit system selected)
F5	Display actual value Test step with fault code/actual value	Update actual values/fault codes



Tips and Tricks

GSP/TCT, GSP/TDE, GSP/TDS

	A. a.ila b.ilita	031 / 101, 031 / 10L, 031 / 103
Icon	Availability	Description
START F5	Quick tests Fault codes, Actual values	Start/continue quick test Start updating fault codes/actual values
STOP F5	Quick tests Fault codes, Actual values	Interrupt quick test Stop updating fault codes/actual values
% F6	Always	Help a) On the selected control unit b) On the overall vehicle c) Operating instructions for DAS
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	View graphic (only when several graphics are displayed)	Select (Switch between graphics)
f	Fault codes, Actual values	More information (Additional information on the fault code/actual value)
F8	Quick tests Graphics view	Details (detailed view of quick test) Details (in red frame)
5 F8	Graphics view Detailed view of quick test	Back (to document, fault code, actual value) Back (to quick test)
F8	After a control unit is selected in the quick test (only for vehicles with system diagnosis)	Establishes communication with the selected control unit in order to implement codings, determine actual values and perform actuations
F9	Quick tests, fault codes	Delete fault codes



Tips and Tricks

GSP/TCT, GSP/TDE, GSP/TDS

Icon	Availability	Description
F9	Graphics view	Zoom in (less area with greater detail)
F10	Graphics view	Zoom out (greater area with less detail)
S F11	Always	Print Print screenshot or entire document
STOP F12	Actuation	Stop actuation (for passenger vehicles)